


Hello, I'm here.
Follow me to extend your Wi-Fi network.

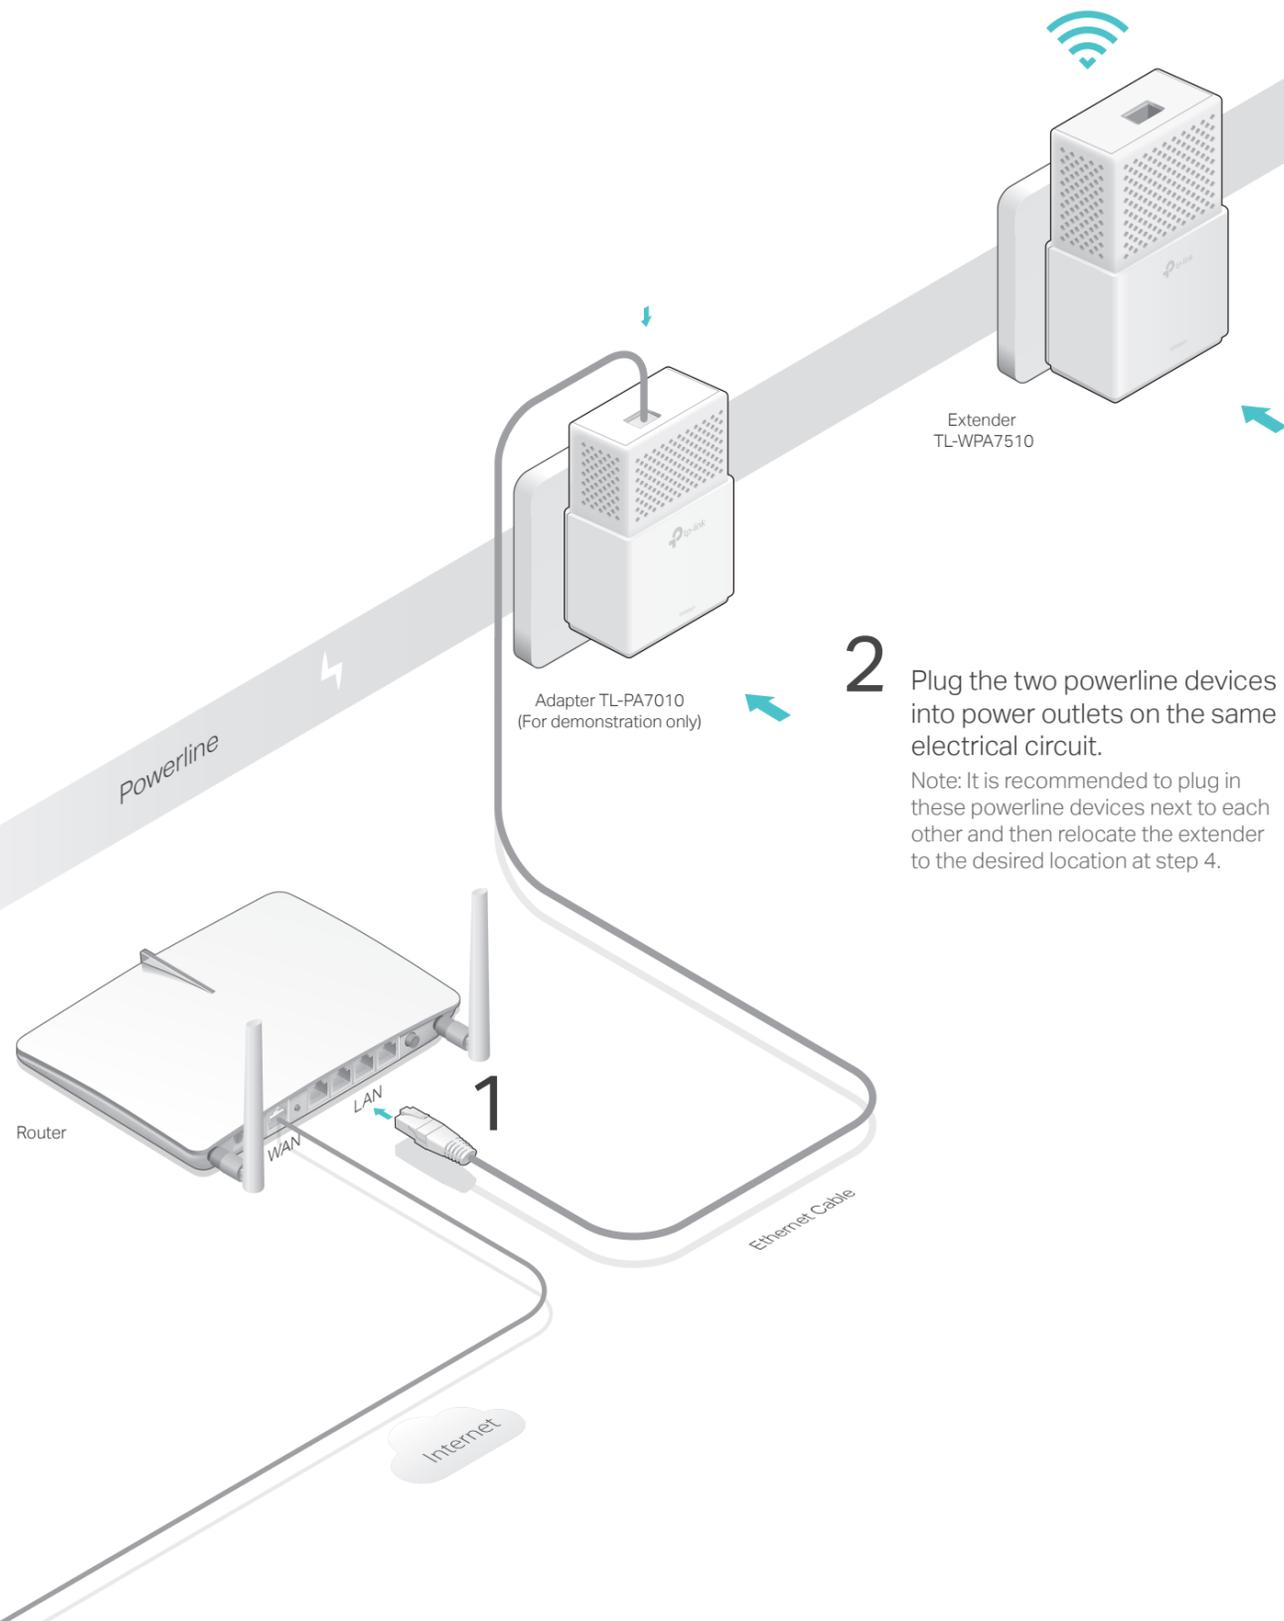


2 Plug the two powerline devices into power outlets on the same electrical circuit.
Note: It is recommended to plug in these powerline devices next to each other and then relocate the extender to the desired location at step 4.

3 Pair the powerline devices.

A Press the Pair button on the adapter for 1 second. The Power LED starts blinking.
Note: If the Power LED does not blink, press the Pair button again.

B Within 2 minutes, press the Pair button on the extender for 1 second. The Power LED starts blinking.


C When the Powerline LED on the extender turns solid, the pairing process is complete.

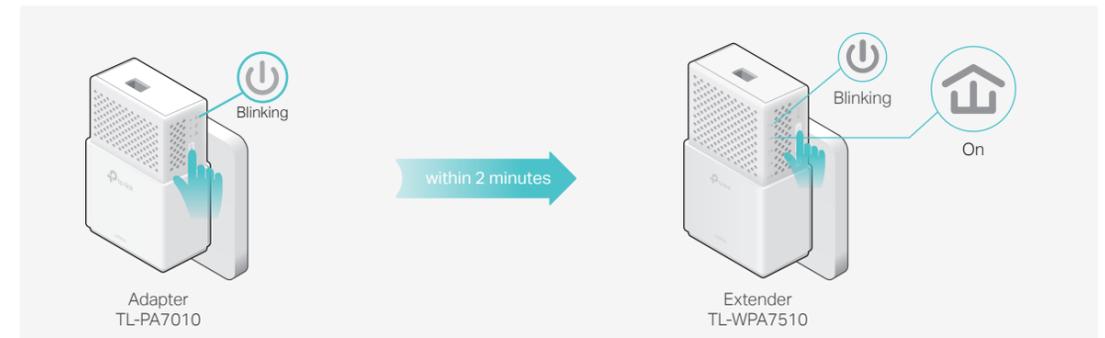

4 Enjoy!

Relocate the extender to the Wi-Fi "dead" zone. Use the SSID (network name) and password on the provided Wi-Fi Info Card to connect to the internet.


Note: A red Powerline LED indicates poor signal strength. Move the extender to another location.

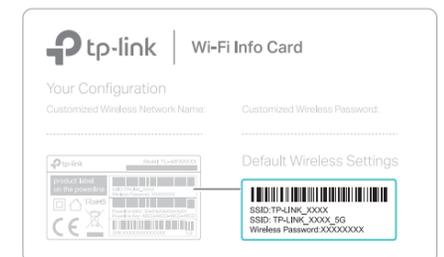

Wi-Fi Clone

Wi-Fi Clone allows you to copy the main router's wireless settings (SSID and password) to the powerline extender in seconds.


1. Plug in the powerline extender near your router, and press the WPS button on the router.

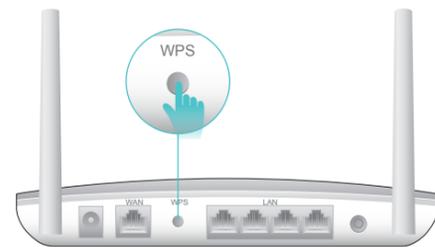

Wireless Router

2. Within 2 minutes, press the Wi-Fi button on the extender for 1 second. The 2.4GHz and 5GHz Wi-Fi LEDs start blinking.

Note: If you want to end the Wi-Fi Clone process, press the Wi-Fi button on the extender again.

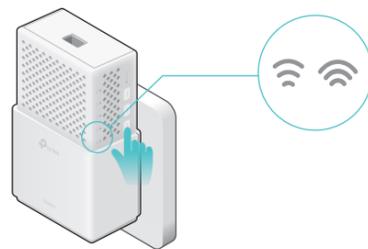

3. When the 2.4GHz and 5GHz Wi-Fi LEDs blink quickly for 3 seconds and then stay on, the Wi-Fi Clone process is complete.


Note: By default, both 2.4GHz and 5GHz wireless settings will be copied at the same time. If not, please try Wi-Fi Clone again or manually change the wireless settings via tpPLC Utility or web interface.

Wi-Fi Auto-Sync

Wi-Fi Move technology helps to keep all Wi-Fi settings and LED schedules on your powerline extenders in sync after your powerline devices are paired.

The settings automatically sync from one powerline extender to another when pairing a new device to the secured powerline network.


Wi-Fi Move is enabled by default and can be accessed via the extender's web interface. For more details, please refer to the User Guide at <http://www.tp-link.com>.

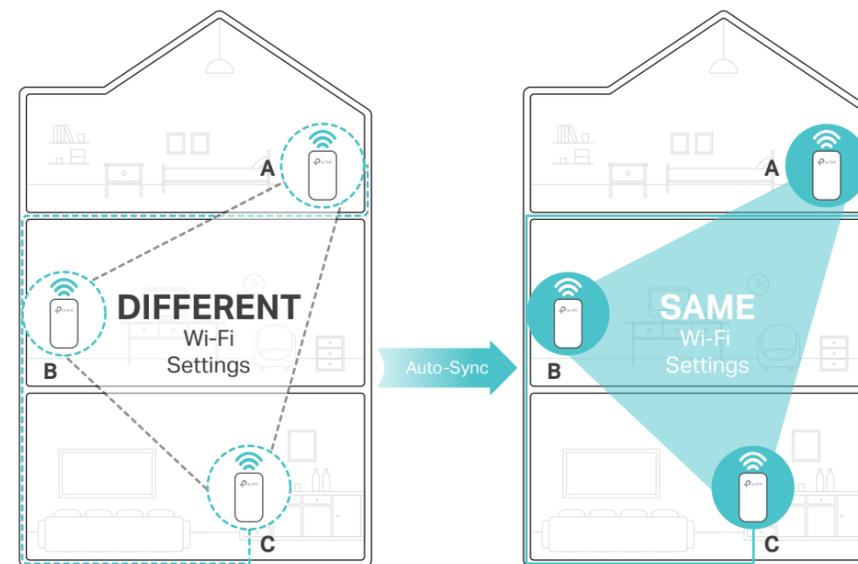

A — Wi-Fi SSID: ABC Password: 123
 B — Wi-Fi SSID: DEF Password: 456
 C — Wi-Fi SSID: GHI Password: 789

A } Wi-Fi SSID: ABC Password: 123
 B }
 C }

Button Legend

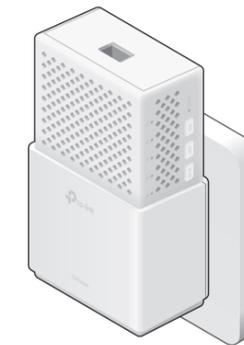

Extender TL-WPA7510

Reset

Press for at least 5 seconds until all LEDs turn off and then back on to reset the powerline extender.

Pair

Press for 1 second to pair two powerline devices. Press for about 8 seconds until the powerline LED  is off to leave the current powerline network.

LED

Press for 1 second to turn all LEDs on or off.

Wi-Fi

Press for 1 second to start Wi-Fi clone. Press for about 5 seconds to turn Wi-Fi on or off.


Attention

Plug the powerline devices into wall outlets instead of power strips.

 Wall Outlet



 Power Strip

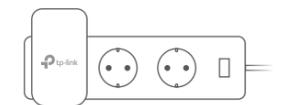

Easy Management

Using tpPLC utility and app for basic configuration:

Find and download the tpPLC Utility on the product's Support page at <http://www.tp-link.com>.

Download the tpPLC App from the App Store or Google Play, or simply scan the QR code.



Using web interface for advanced configuration:

Connect your device to the powerline extender wirelessly and visit <http://tplinkplc.net>. Use 'admin' for both username and password upon initial login.

Note: For advanced settings, please refer to the User Guide on our official website at <http://www.tp-link.com>.

Frequently Asked Questions

Q1. How to reset my powerline extender?

A. With the extender plugged in, press and hold the Reset button until all LEDs turn off. When the LEDs turn back on, the reset process is complete.

Q2. What can I do if there is no internet connection in my powerline network?

1. Make sure all powerline adapters and extenders are on the same electrical circuit.
2. Make sure each device's Powerline LED  is on. If not, pair your devices again.
3. Make sure all hardware devices are correctly and securely connected.
4. Check if you have an internet connection by connecting the computer directly to the modem or router.
5. Make sure your computer's IP address is in the same segment as your router's.

Q3. What can I do if a successfully-paired extender does not reconnect after relocating?

1. Make sure all powerline adapters and extenders are on the same electrical circuit.
2. Pair it again with another powerline device, and make sure the Powerline LED  is on before relocating it.
3. Check for possible interference, such as washers, air conditioners or other household appliances that may be too close to one of the powerline devices. Plug it into the integrated electrical socket to remove some electrical noise if your powerline device has an integrated electrical socket.

 For technical support and more information, please visit <http://www.tp-link.com/support>, or simply scan the QR code.

